



Installation

- 1 Cut out template where indicated.  
Fold template on dotted line and place on counter top.  
Trace template using a soft lead pencil.

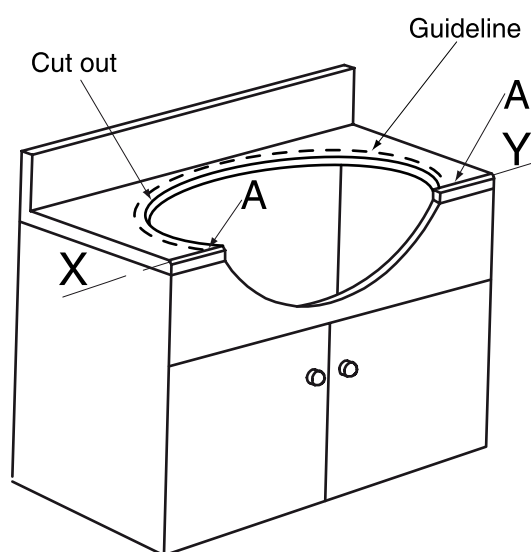

- 2 Cut out the opening in the counter top by carefully following the traced pencil line (Extra care should be used not to go below front edge).  
3 Temporarily place the lavatory into opening and adjust to fit.  
4 Put slot of underside lavatory into front edge of cabinet.

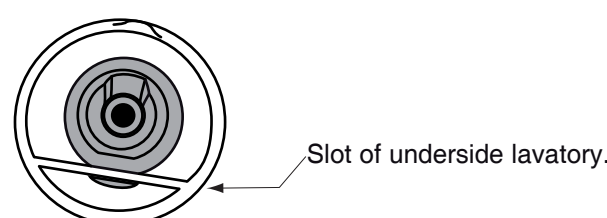

- 5 Trace a pencil line around the outside edge of lavatory.  
6 Remove lavatory.  
7 Apply ribbon of polyseam seal on counter top to create an even strip from guide line to the opening.  
8 Carefully place lavatory into opening and press down firmly. Use guideline to position properly immediately remove excess polyseam seal with a damp cloth.

